


324mm

2mm

2mm

Beatbot

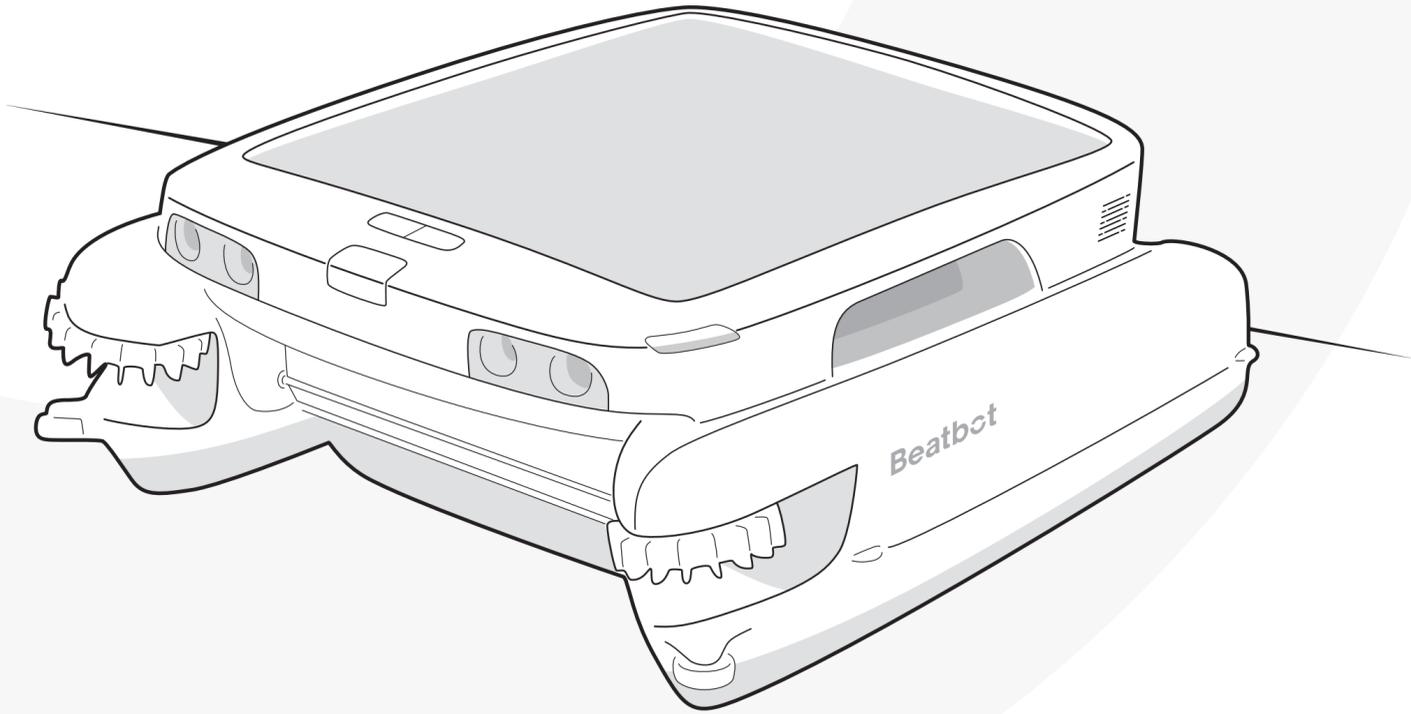

Quick Start Guide

iSkim Ultra

If you have any questions, please
feel free to contact us



Official Website
www.beatbot.com



Email
service@beatbot.com



North America Toll Free
(833) 702-4399
Mon-Sun 9:00 am-6:00 pm (CST)

Please read the back guide before use



Scan to Check E-Manual

401mm

太阳能板曲线边缘


灰底为出血删去的边缘

324mm


Beatbot

Quick Start Guide

Product Structure Diagram

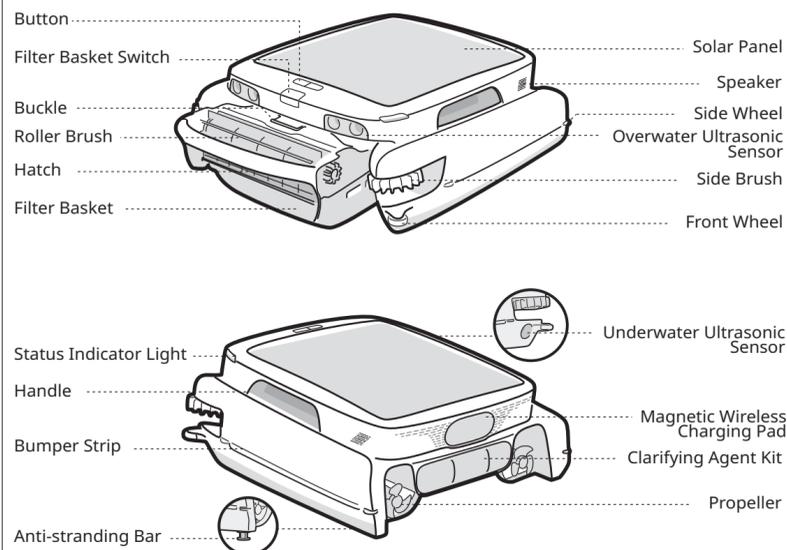

Robot Button

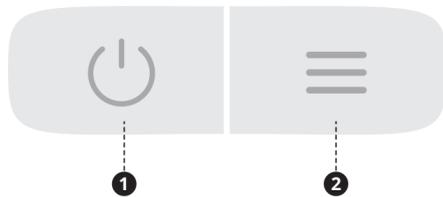

Power Button

- Short Press: Press briefly to turn the robot on, start, or pause its operation.
- Long Press: Press and hold for 3 seconds to turn the robot off.

Action Button

- Short Press: Press briefly to enable/disable the dispensing of clarifier.
- Long Press: Press and hold for 10 seconds to restore the factory setting.

Power + Action Button

- Press and hold for 3 seconds to activate the device's hotspot.

Lighting Effects

Flashing green light		Working
Flashing blue light		Network configuring
Flashing red light		Robot malfunction
Flashing orange light		Low battery
Solid purple light		Clarifier dispensing
Breathing light		Charging

Network Configuration

1. APP Download

Scan the QR code to download the latest version of the APP

You can either scan the QR code below or search for "Beatbot" in the App Store or Google Play to download the latest App.




2. Robot Connection

Please check the following items before connecting


- Make sure the robot is turned on.
- Confirm that both your mobile phone and the robot are within the same Wi-Fi coverage range with a strong signal.
- Ensure your phone is connected to Wi-Fi, supporting only the 2.4GHz network.
- Bring the phone close to the robot (the distance between your phone and the robot should be within 1m).

Press and hold both the "Power" and "Action" buttons simultaneously for about 3s, and when you see the indicator flashing blue, the robot is ready for network setup. Then, follow the steps below to connect the robot:

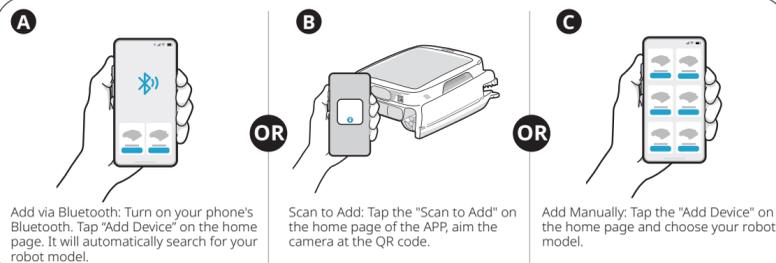

Installation of Clarifying Agent Kit


- Remove the cap of clarifying agent kit.
- Tear off the aluminum film on the interface of the kit.
- Install the kit onto the robot with the interface facing downwards and press it until you hear a "click".

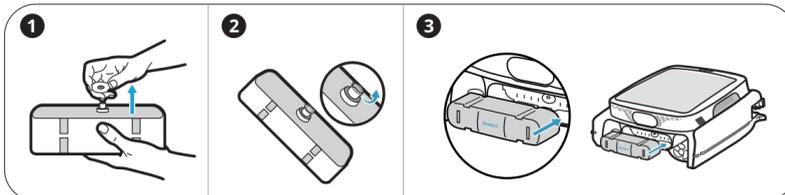

Start

- Make sure the robot is turned on before use.
- Gently place the robot into the pool with both hands. Then, the robot will start cleaning.

Charging

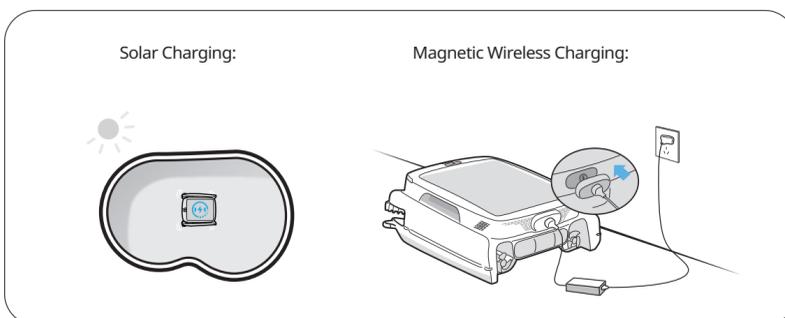

401mm

太阳能板曲线边缘

灰底为出血删去的边缘